 

## PLUS SYSTEM INSTALLATION OPERATION

If you have a model TPI, TPX, SPI or SPX these are indicative of a "PLUS" system with cartridge filters on the outlet of the main centrifugal separator. These units are for removal of very fine particulate (down to .35 micron) and require field installation. Installation instructions are following.


## 1. Installation of skid with cartridge filters

The cartridge filter skid is equipped with quick disconnect couplings that are very easy to install. There will be either a single cartridge filter on the skid or a dual filter. Below is a diagram showing the points of installation for each type of skid.



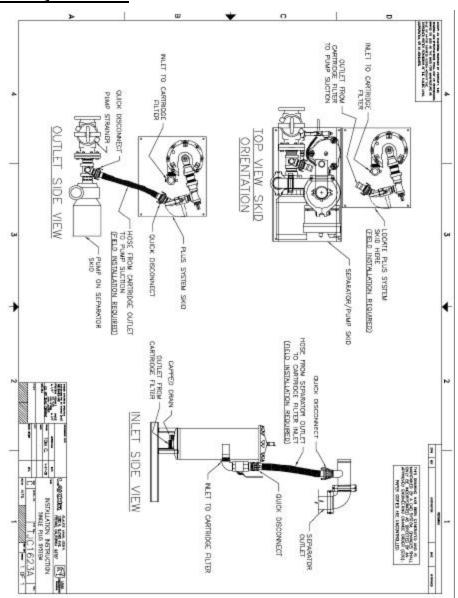

## **Dual Plus System Skid**

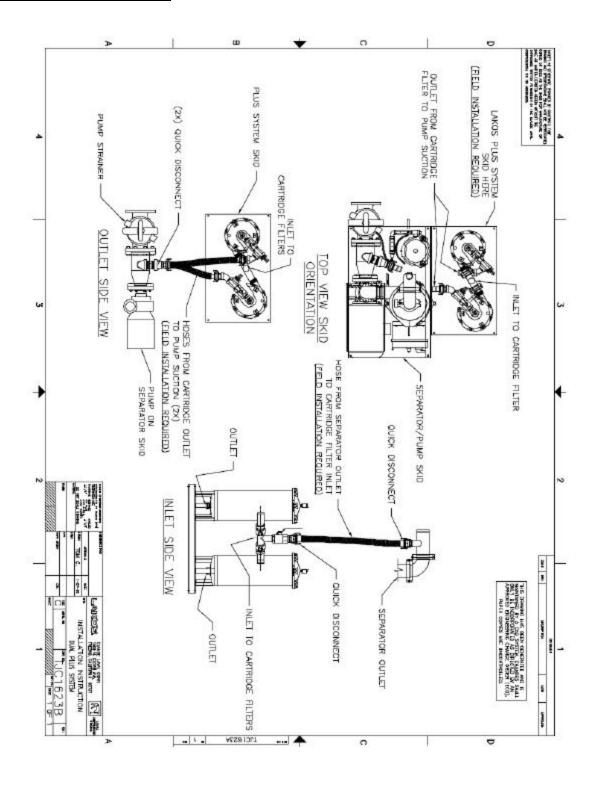

LS-591

## 2. Removal and changing the cartridge

There is one .35 micron cartridge installed in the stainless steel housing. This cartridge can either be cleaned or replaced with a new one. See below for instructions of how to change the cartridge.

